


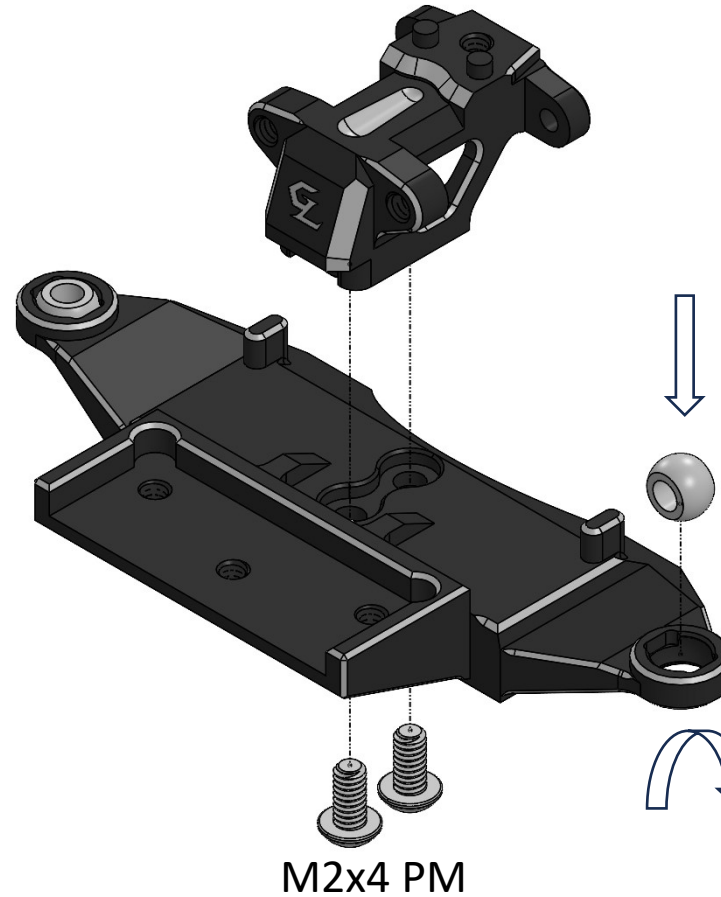

Step 1. Follow the orientation and gently to slide the ball into the ball hole.

*Caution: Force to snap the ball in will get damage in all Alloy part.*

Step 2. Turn the ball until the 2mm hole face up.